

 
QUARTZ TIMER ALARM CLOCK

810026




MODEL CT-102

DISPLAY	S1	S2	S3	S4	S5	DIGIT (2-9)
CLOCK NORMAL TIME	MODE ALARM	ON/OFF ALARM	SET	PM	SET CLOCK	
ALARM TIME	MODE ALARM	ON/OFF CLOCK	SFT	PM	SET ALARM TIME	
TIMER	STOP	MODE START	RESET	up/down	Memory	SET TIMER
	START	MODE STOP			VIEW DATA	IMU working

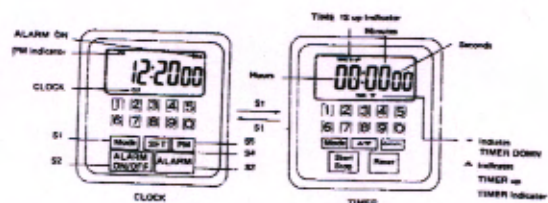

ERROR SOUND SYSTEM

 In "REAL TIME", ALARM SETTING Status, if HOURS SETTING more than 12, Minutes setting more than 59, then press S4 (SET) "E" will appear and sound for 5 seconds to remind ERROR SETTING.

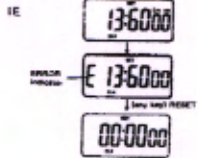

In "TIMER" SETTING STATUS if HOUR Setting more than "99" MIN. SEC. setting more than "99" then press S2 START "E" will appear and sound.

for 5 seconds to remind ERROR SETTING



 
FEATURE

1. REAL TIME/ALARM CLOCK with Hourly CHIME.
2. COUNT UP / DOWN TIMER with STOPWATCH.
3. EASY SETTING BY KEY TONE BUTTONS.
4. ALARM SOUND FOR 4 MIN.
5. TIMER RECALL AND VIEW DATA FUNCTION.
6. ERROR SOUND SYSTEM.
7. OVER TIME RECORDING.
8. 1-SEC. STOPWATCH, CHRONO TO 100HR.
9. DESIGNED W / MAGNET CLIP STAND.

■ **TIMER SETTING**

(MAX. Can be set to 99^H 59^M 59^S)
 (Min. Can be set to 1 second)

1. Press S₁, LCD show "TMR" TIMER MODE indicator.
2. Press S₄, Choose TIMER UP or DOWN.
3. TIMER Setting, EX. Press 1
4. Press 2,
5. Press 3
6. Press 4
7. Press 0
8. Press 0
9. a. IN Timer-Down mode, press S₂, start count down.
9. b. IN Timer-up mode, press S₂, start count up.
- 10.a. When time is down to Zero, will start to count automatically
- 10.b. In TIMER up mode when time is up to "the preset time", will sound for 60 seconds.
11. press any key Stop SOUND press S₂, Stop counting
12. press S₃, Time reset to Zero. "TIME'S up" disappear.

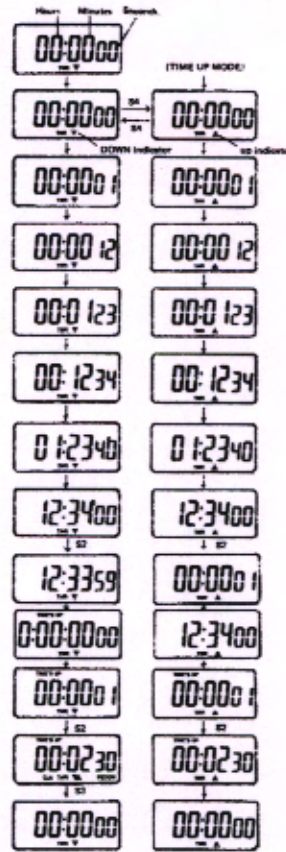

■ TIMER RECALL

At any time when timer stop, press S5 will show "the preset time" press S₂, start counting.

■ VIEW DATA

While the digits start to count up or Down, press S5 will show the "preset time" until key release, then return to running automatically.

■ SOUND STOP

When the sound is output, it is stopped by depressing any keys in any mode, In this case, one press stop the sound.

■ HOW TO STOP COUNTING

During Sound, want to stop counting, must press-S2 (stop) twice immediately

■ NOTE

If the count-up TIMER is in RUN Status, the COUNT-DOWN TIMER will not be allowed. On the other hand, If the count-Down TIMER is in RUN status, the count-up timer will not be allowed, too.

When the battery is changed with new one or take off the battery, then re-insert it then will appear blank LCD display or random wording LCD display.

 
It's normal conditions of IC features.

We should "re-start the IC circuit"-just press buttons S2, S3, S4, S5 at the same time.


The it will start working normally.

CLOCK SETTING

1. Press S₁ LCD shows



 2. press S₄ (SET) LCD shows "SET" flashing.



3. press 1, LCD shows



 
4. press 2, LCD shows




5. press 3, LCD shows




6. press S₅ (PM), LCD shows



 7. press D, LCD shows




 8. press S₄ (SET), LCD shows "SET" disappear, then finish Setting. Seconds start counting.




■ ALARM TIME SETTING

 1. press S3, LCD show
2. press S4, "SET" flash
3. press 1
4. press 2
5. press 0
6. press 0
7. press S5 (PM),
8. press S4, "SET" disappear, then finish setting. ALARM ON automatically
9. press S3, Mode change to "CLOCK".

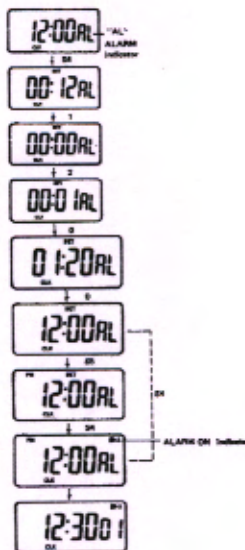


■ ALARM ON/OFF

1. press S2, Choose ALARM ON or OFF. The milk "|||| A" indicates ALARM ON.

 

ALARM SOUND STOP

 when the sound is output, it is stopped by depressing any switches in any mode. In this case a depressed switch only stops the sound. ALARM SOUND for 4 Minutes.



CHIME ON/OFF

"HOURLY CHIME" ONLY WORK, WHEN ALARM SETTING ON: